

Coordinates Window

The Coordinates window displays all of the joint coordinates (degrees of freedom) in a model, and provides an interface for changing their values. It displays only the coordinates in the current model. You can set the current model using the Navigator window (visit [Opening, Closing, and Using the Navigator Window](#) for more information). This chapter covers:

- [Coordinate Controls and Poses](#)

Next: [Coordinate Controls and Poses](#)